

TOOLS REQUIRED:

Philip's head screwdriver,
Stud finder, Electric Drill,
Rubber Mallet, Pencil, Spirit Level

WARNING: HANDLE CUT METAL
EDGES CAREFULLY

ITEM CODE: 01804

PARTS LIST



1x Rack It Wall Hang Track 900MM



2x Rack It Wall Beam 900MM



1x Rack It Wall Wire Shelf 900 X 600MM



10PK Self Tapping Screws



1x Rack It Wall Brackets



1x Rack It Wall Double Slot Wall Strips 1200MM



2x Shelf Support Brace 600MM



Includes Plaster Board and Dyna Bolt fixings

⚠ IMPORTANT NOTE

Total weight loading for the Rack It Wall 900mm Add On Kit **must not exceed 100KG** each, including items loaded onto hooks and other accessories. Adding such accessories does not increase weight loading capacity.

STEP 1

Find and mark at least one stud on chosen Wall next to existing Rack It Wall unit using Stud Finder.



STEP 2

Place Hang Track onto wall next to existing Rack It Wall Hang Track and use a Spirit Level to ensure Hang Track is level. Then Mark all screw positions with pencil.



STEP 3

Insert Plasterboard Anchors into required locations by pushing them into the plasterboard and tighten with a screwdriver.



STEP 4

Secure Hang Track to wall by inserting provided screws through Hang Track screw holes and into Plasterboard Anchors. Use an electric drill to screw into studs.




STEP 5

Disassemble any existing Rack It Wall Units directly next to the Add On Kit to allow room for the Back Beam to be installed.



STEP 6

Hang Wall Strip onto one end of the Hang Track. Note: Wall Strip is not secured to wall at this point.

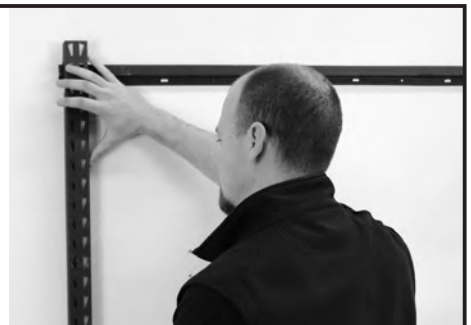

STEP 7

Attach back beam to both wall strips at desired height



STEP 8

Tap in place with mallet to ensure proper fit.




STEP 9

Mark Wall Strip screw points on to wall with pencil.

**STEP 10**

Remove Wall Strip And Back Beam from Hang Track and insert Plasterboard Anchors into required location by pushing them into the plaster board and tightening with screwdriver.

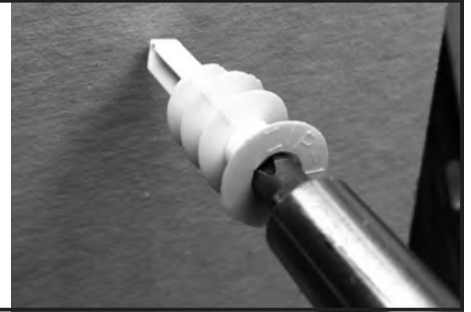**STEP 11**

Place wall Strip back on to Hang Track, along with Back Beam ensuring the Wall Strips line up with Plasterboard Anchors from Step 10.

**STEP 12**

Screw provided screws into Plasterboard Anchor to secure Wall Strip.

**STEP 13**

Reattach Bracket to original Wall Strip so that the top of the Bracket is in-line with Back Beam and tap into place with a mallet.

**STEP 14**

Attach Bracket to Wall Strip of Add On Kit so that the top of the Bracket is in-line with Back Beam and tap into place with a mallet.

**STEP 15**

Ensure to fix Brackets into place with provided screws.

**STEP 16**

Attach all Front Beams to Brackets and tap into place with a mallet.

**STEP 17**

Ensure to fix all Front Beams into place with provided screws.

**STEP 18**

Insert Support Braces into Front and Back Beams in the two matching slots on both Beams.

**STEP 19**

Place wire shelves provided onto Beams and Support Braces.

**STEP 20**

Complete.

