

ITEM CODE: 01904

VERY IMPORTANT





Please read the instructions completely before commencing assembly. Unpack the unit and verify that you have all parts listed below. Assemble the unit on a solid, level surface.

SAFETY TIP

When assembling or installing this product wear protective gloves and eyewear

PARTS LIST:

CABINET PARTS


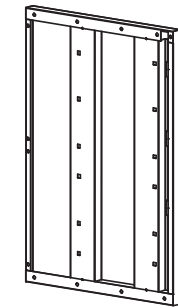
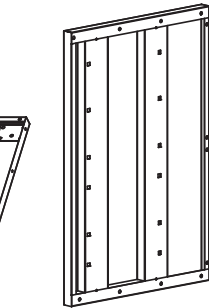
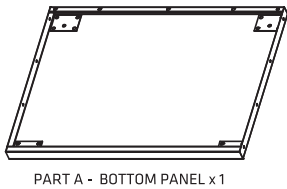


PART H - DRAWER RUNNERS x 12



PART I - DOOR LOCK, TONGUE & KEYS

DRAWER PARTS

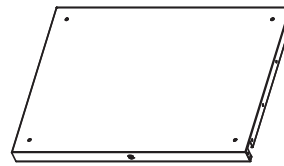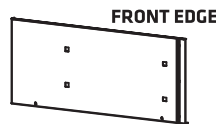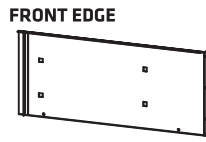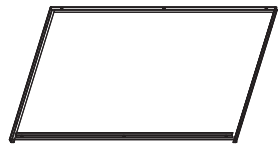


PART E - TOP PANEL x 1



PART M - LARGE DRAWER BACK PANEL x 2



PART N - LARGE DRAWER FRONT PANEL x 2

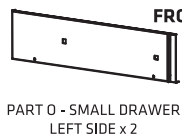

PART O - SMALL DRAWER LEFT SIDE x 2

PART P - SMALL DRAWER RIGHT SIDE x 2



PART Q - SMALL DRAWER BACK SIDE x 2



PART R - SMALL DRAWER FRONT SIDE x 2



PART S
M6 SCREW x 44
(40 for cabinet assembly
+ 4 for joining 2 Cabinets)



PART T
M5 SCREW x 2
(for assembly of locking bar,
Note: 4 x M5 screws are pre-fixed
to Cabinet panels)



PART U - M4 SCREW x 76
(FOR DRAWER ASSEMBLY)




PART V - M5 NUT x 6
(FOR ASSEMBLY OF
LOCKING MECHANISM)

PLEASE NOTE: If using an electric screwdriver only loosely tighten screws, finish tightening with hand screwdriver to avoid damage.




STEP 1

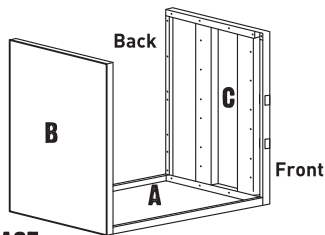

FIX SIDE PANELS TO BASE

1. Start with the Bottom Panel (A) and screw fix left Side Panel (B). Fit the other Right Side Panel (C).
2. When setting up Side Panels make sure the pre-punched screw holes are to the back and fixing points for the drawer runners line up.


STEP 2

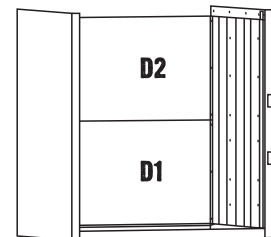

FIX BACK PANELS

Bottom Back Panel (D1) has 5 x M6 NUTS pre-fitted along the top lip. Screw fixed D1 to the Bottom Panel (A) first, with M6 Nuts to the TOP edge. Screw fix Top Panel (D2) to Bottom Panel (D1).


STEP 3

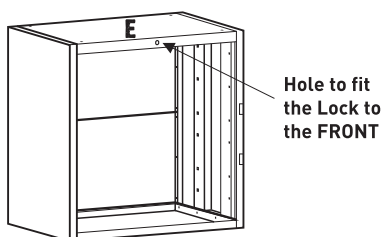

FIT THE TOP PANEL

Screw the Top Panel (E) onto the partially assembled Cabinet.

STEP 4A

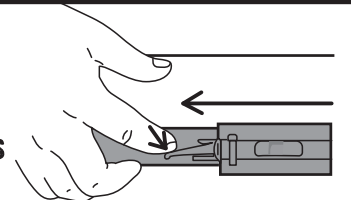

SEPARATE DRAWER RUNNERS INTO 2 PARTS

1. Gently pull the Drawer Runner (H) out to full extension.
2. Depress Black Toggle and continue to pull the Inner Runner forward. You will feel the catch release and the 2 parts will separate.

ITEM CODE: 01904


VERY IMPORTANT

Please read the instructions completely before commencing assembly. Unpack the unit and verify that you have all parts listed below. Assemble the unit on a solid, level surface.

SAFETY TIP

When assembling or installing this product wear protective gloves and eyewear


STEP 4B

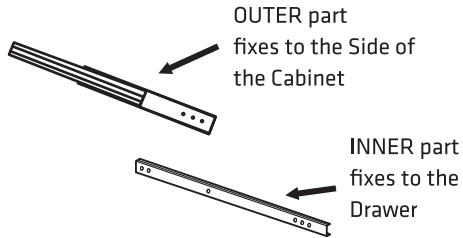

DRAWER RUNNER PARTS

PART H – Separate all 12 Drawer Runners into the Inner and Outer parts.

STEP 5A

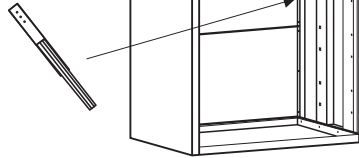


FIX THE DRAWER RUNNER (OUTER) TO CABINET

Fix 6 x Outer Runners to the Right Side Panel and 6 x Outer Runners to the Left Side Panel.

STEP 5B


6 x Runner Outer Parts fitted to each side Panel

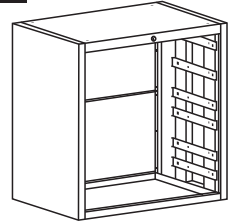


CHECK ALL 12 DRAWER SLIDES

Once all 12 x Outer Drawer slides have been fitted (6 per side) check that the slides run smoothly.

STEP 6

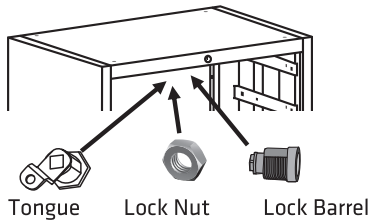

Lock Barrel and Tongue installed



INSTALL LOCK ASSEMBLY

1. Remove the lock nut and fit the Lock Barrel through the hole in the Top Panel.
2. Fix the Barrel in place with the Locking Nut.
3. Fit the Lock Tongue onto the lock mechanism.

STEP 7




INSTALL TOP LOCK BAR

There is a channel inside the Top Panel (E) to fit the Top Lock Bar (F).

1. Install the Top Lock Bar so it fits on the pivot point which has a pre-fixed bolt. Fasten the Top Lock Bar with an M5 Nut.
2. Fix one end to the Lock Tongue and fasten with 1x M5 Nut and Bolt.
3. The other end connects to the Side Lock Bar which is installed in the next step.

INSTALLED IN THE TOP CHANNEL

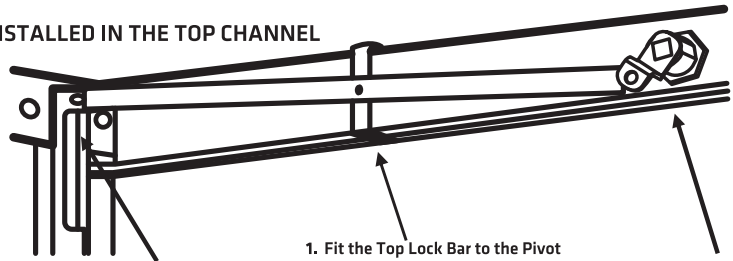

1. Fit the Top Lock Bar to the Pivot Point (M5 Bolt already installed).
2. The Top Lock Bar is joined to the Side Bar with M5 Nut & Bolt in the next step.
3. Fix the Top Lock Bar to the Lock Tongue with M5 Nut and Bolt.


STEP 8



INSTALL SIDE LOCK BAR ASSEMBLY

There is a channel inside the RIGHT SIDE Panel to fit the Side Lock Bar (G).

1. Install the Side Lock Bar so it fits on the pre-fixed bolts and fasten with M5 Nuts.
2. Join to the Top Lock Bar with M5 Nut & Bolt.

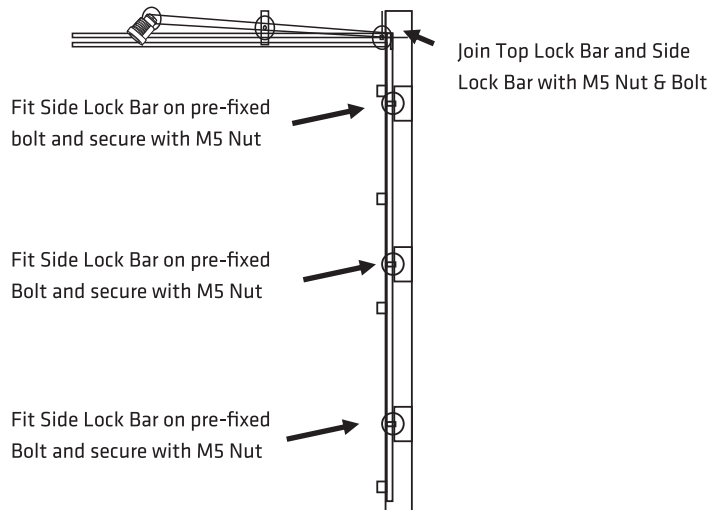

ITEM CODE: 01904


VERY IMPORTANT

Please read the instructions completely before commencing assembly. Unpack the unit and verify that you have all parts listed below. Assemble the unit on a solid, level surface.


SAFETY TIP

When assembling or installing this product wear protective gloves and eyewear

STEP 9 ASSEMBLE SMALL DRAWERS x 2

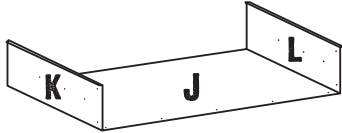



1. Start with the Bottom Drawer Panel (J) and screw fix the small LEFT Side Panel (K). Fit the Small RIGHT Side Panel (L).



2. Screw fix the Small Back Panel (Q).




3. Screw fix the Small Front Panel (R).

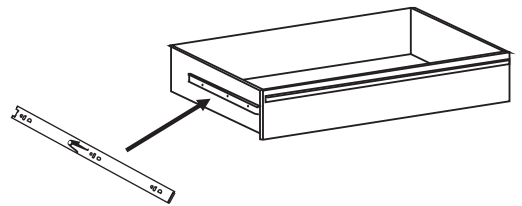


4. Screw Fix 1 x Runner INNER Part to each side of the drawers.


STEP 10 ASSEMBLE LARGE DRAWERS x 2

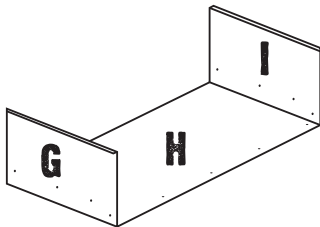


1. Start with the Bottom Drawer Panel (J) and screw fix the Large LEFT Side Panel (G). Fit the Large RIGHT Side Panel (H).

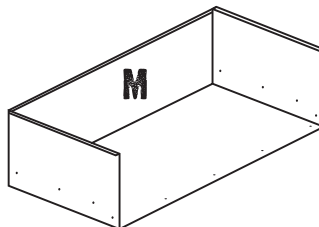

2. Screw Fix the Large Back Panel (M).

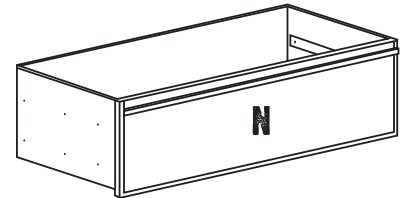


3. Screw Fix the Large Front Panel (N).

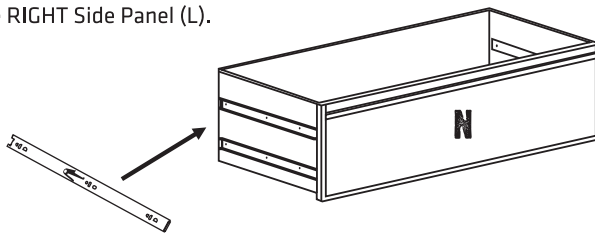

4. Screw Fix 2 x Runner INNER Parts to each side of the Drawer, noting correct positioning of Runner.

STEP 11

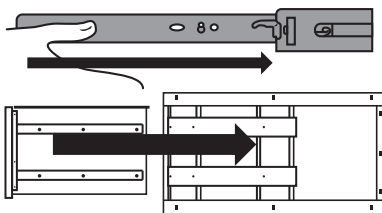

INSERT LARGE DRAWERS INTO THE CABINET

You can now insert the LARGE Drawers into the Cabinet.

1. Start with the bottom LARGE Drawer unit.
2. Carefully line up Inner and Outer parts of ALL 4 Drawer Runners.
3. Once all Runners are touching, gently push the Drawer closed.
4. You may have to slightly open and then close the Drawer a few times until you feel all 4 Runners fully engage.
5. Insert the remaining LARGE Drawer immediately above the bottom Drawer using the same procedure 2, 3, 4 as outlined.

ITEM CODE: 01904


VERY IMPORTANT

Please read the instructions completely before commencing assembly. Unpack the unit and verify that you have all parts listed below. Assemble the unit on a solid, level surface.

SAFETY TIP

When assembling or installing this product wear protective gloves and eyewear

STEP 12

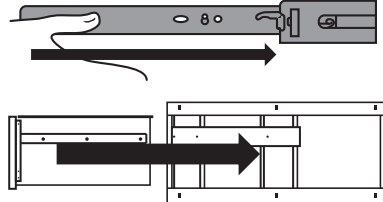

INSERT SMALL DRAWERS INTO THE CABINET

You can now insert the SMALL Drawers into the Cabinet.

1. Fit a Small Drawer immediately above the LARGE Drawer units.
2. Carefully line up Inner and Outer parts of BOTH Drawer runners.
3. Once Runners are touching, gently push the Drawer closed.
4. You may have to slightly open and then close the Drawer a few times until you feel both Runners fully engage.
5. Insert the remaining SMALL Drawer into the last position using the same procedure 2, 3, 4 as outlined.

OPTIONS:

RACK IT PRO CASTOR KIT (Item 01907, sold separately).

Easily fix castors to make a rolling 4 Drawer unit.

Stack and join a **RACK IT PRO 2 DOOR UNIT** (item 01902) on top of your **RACK IT PRO 4 DRAWER UNIT**.

WARNING: DO NOT STACK 2 x 4 DRAWER CABINETS.

The Top Panel (Part E) is supplied with 4 x pre-fitted nuts.

The Bottom Panel of the 2 DOOR unit has matching


pre-punched holes so the 2 units can be bolted together.

4 x fixing points to join 2 units



JOINING 2 RACK IT PRO UNITS TOGETHER DO NOT FIX 2 x 4 DRAWER UNITS!

✓ CORRECT

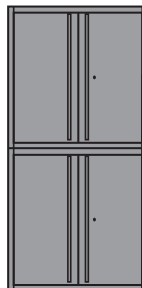

✓ CORRECT



✗ INCORRECT



STEP 13



FIX THE SAFETY STRAP

Fix the Safety Strap to the rear of the Cabinet using a suitable self-drilling TEK screw.

Fix the Strap to the Top Panel, not the Back Panel.

Fix the other end of the Safety Strap to the wall.



THIS PRODUCT SHOULD BE ANCHORED TO THE WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.

To help avoid any serious injury or death, this product has been supplied with a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in any doubt as to how to permanently fix the product or as to what fixing devices to use. Check anchors regularly.