

Fix one corner at a time. Ensure flanges on all Beams are at the


bottom. PIC 3

## DRAWER KIT

**ASSEMBLY INSTRUCTIONS** 

**TOOLS REQUIRED: RUBBER MALLET** 

WARNING: HANDLE CUT METAL EDGES CAREFULLY.

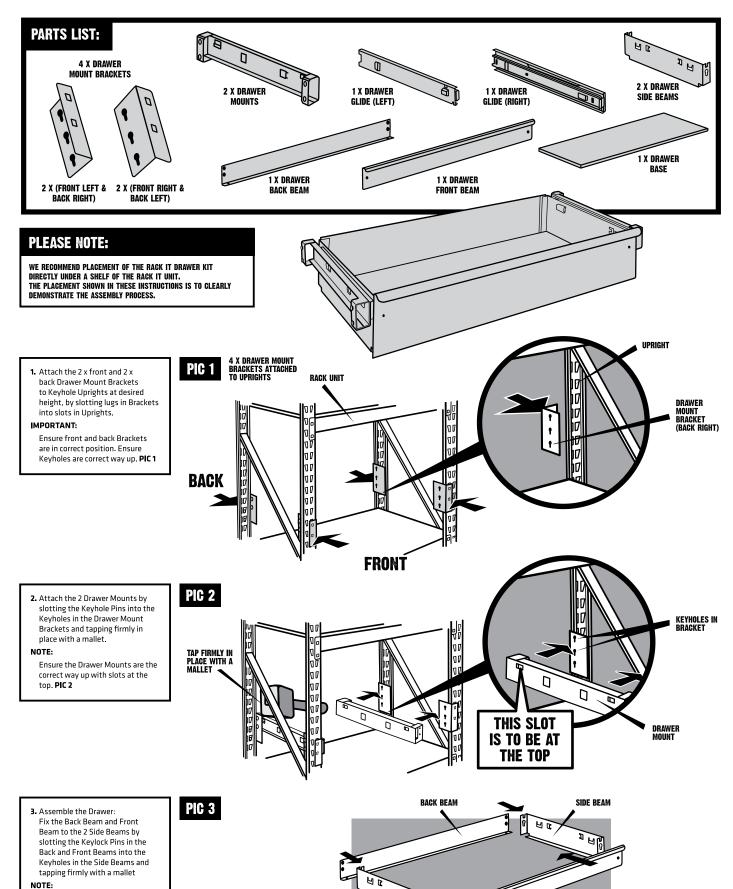

SIDE BEAM

FRONT BEAM

